


FPK 84A-I8 2004-07 Ford F650 & F750 VT 365 Diesel W/O AC

INSTALLATION NOTES

- 1. Disconnect negative battery cable. If equipped with an air compressor, remove the air compressor belt. Remove the accessory drive belt. Remove the grooved idler at location "A" and replace it with the flat idler (12), reusing the OEM idler hardware. Install mounting plate (1) with bolts (4) and tighten securely. Install A-mount adapter plate (2) to mounting plate (1) with bolts (5) and lockwashers (6). <u>Do Not Tighten.</u>
- 2. Install the clutch pump with bolts (9) flatwashers (10), lockwashers (6), and nuts (11). Tighten bolts securely. Install the coil and clutch per manufacturer's instructions. Using a straight edge, make certain the clutch pulley is aligned with the OEM pulleys, then tighten bolts (5) securely. Install both gussets (3) using bolts (7) and lockwashers (8), then tighten bolts securely.
- 3. Install the new belt (16) onto the engine according to the belt diagram. If equipped with air compressor, install the belt. Check for clearances on all moving parts.

FPK 84A-I8

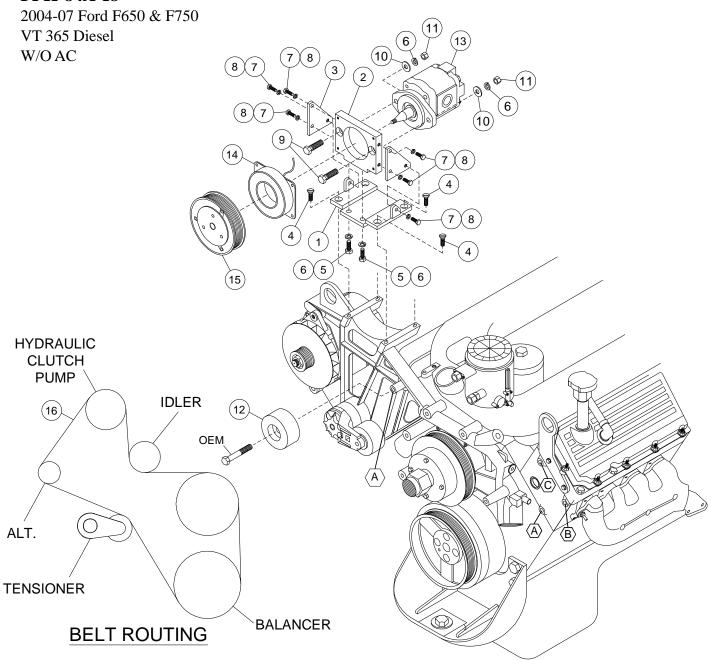

PARTSLIST

- 1. IMP 63AI8 (1)
- 2. PBL2M (1)
- 3. IMB63I81 (2)
- 4. 8mm x 50mm FHSCS (1)
- 5. 3/8 x 1 Bolt (2)
- 6. 3/8 LW (4)
- 7. 1/4 x 3/4 Bolt (6)
- 8. 1/4 LW (6)
- 9. 3/8 x 1-1/2 Bolt (2)

- 10. 3/8 FW (2)
- 11. 3/8 Nut (2)
- 12. IPCDP Idler (1)
- 13. Clutch Pump Assembly (Sold Separately)
- 14. Coil
- 15. Clutch
- 16. Belt; Dayco 5080855 (1)