



CW MILL EQUIPMENT CO., INC.
P.O. Box 246 • Sabetha, Kansas 66534
(785) 284-3454 • FAX (785) 284-3601

FMK9392V-I8
2003-09 Ford Truck 650 & 750
CAT 3126-C7, W/AC


INSTALLATION NOTES

1. Disconnect negative battery cable. Remove intercooler tube and both rubber elbows. Remove the four alternator bolts one at a time and replace them with studs (3) and nuts (4). Torque to 35-40 ft/lbs. Install the plate assembly (1) onto the four alternator studs and secure with lock washers (5) and nuts (4). Torque to 35-40 ft/lbs. Move O.E.M. idler from location "A" to location "B". Install auxiliary alternator with bolts (17), slide bushings (18).
2. Install idler (7) onto bracket (1) in location "D", with bolt (8) and spacer (6). Install belt (16) as shown in belt diagram. Install new intercooler tube (10) with new elbows (11, 12) and clamps (13, 14). Reconnect battery cable.

FMK9392V-I8

2003-09 Ford Truck 650 & 750

CAT 3126-C7, W/AC

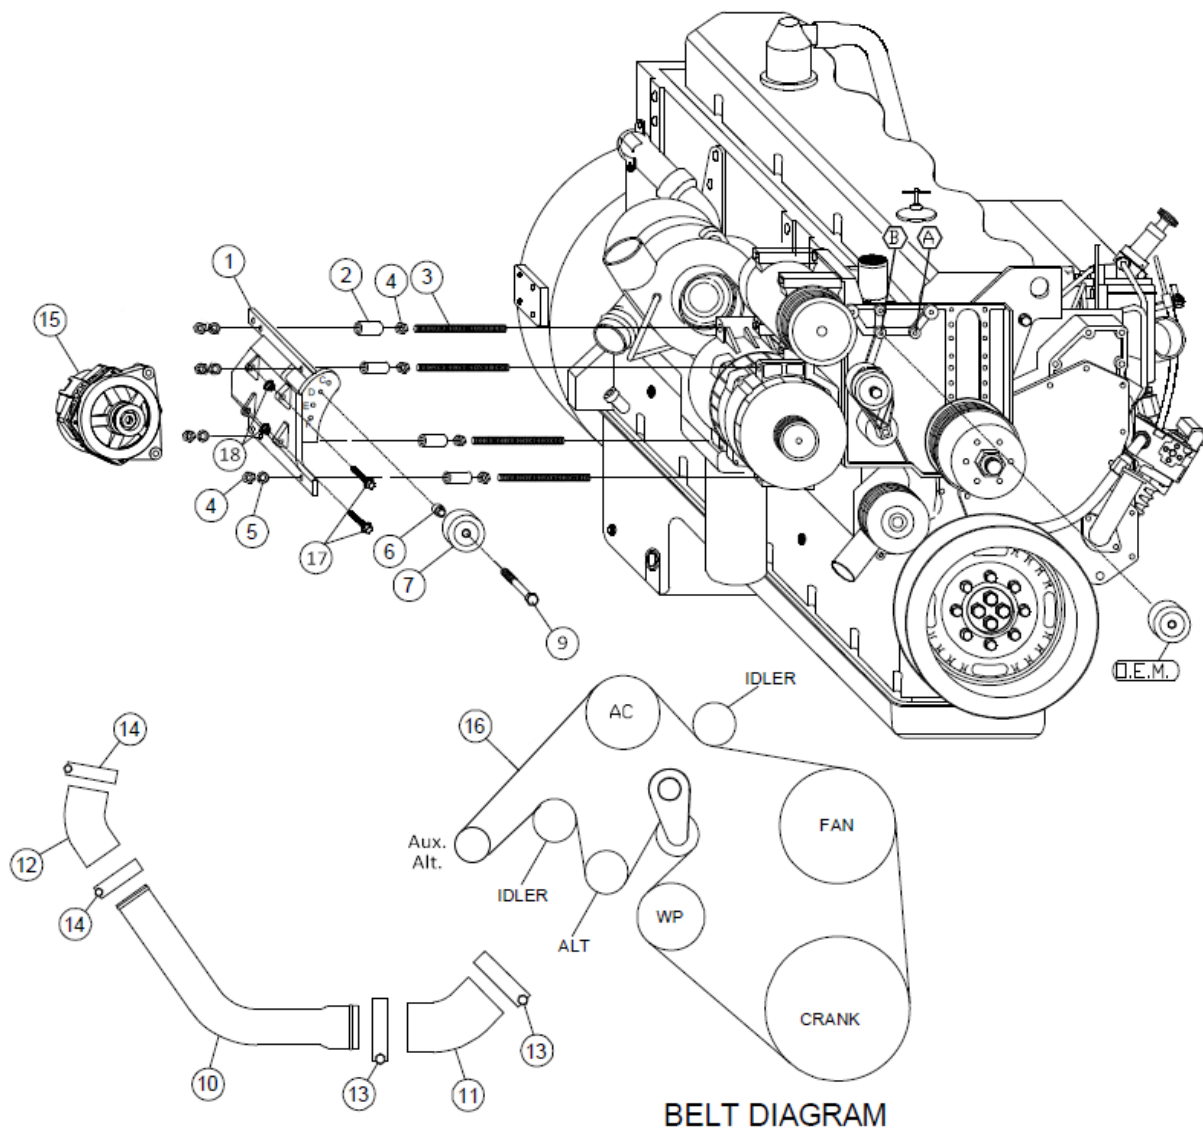

BELT DIAGRAM

PARTS LIST

- | | |
|--------------------------------|---------------------------------|
| 1. FMP9392V-I8 (1) | 11. 3 1/2" Rubber Elbow (1) |
| 2. SP100-1.340 (4) | 12. 3" Rubber Elbow (1) |
| 3. 10mm x 180mm Stud (4) | 13. 250-92 Hose Clamp (2) |
| 4. 10mm Nut (8) | 14. 250-84 Hose Clamp (2) |
| 5. 10mm LW (4) | 15. Alternator (Not Included) |
| 6. FMB935 (1) | 16. 5080970 Belt Dayco |
| 7. 89016 (1) | 17. 10mm X 80mm Flange Bolt (2) |
| 8. NOT USED | 18. 1255-0090 Slide Bushing (2) |
| 9. 10mm x 40mm Flange Bolt (1) | |
| 10. 3-55-ST 3" Steel Elbow (1) | |