



CW MILL EQUIPMENT CO., INC.
P.O. Box 246 • Sabetha, Kansas 66534
(785) 284-3454 • FAX (785) 284-3601

CMK 37-92V-I6ALT

1996-2000 CHEVY TRUCK

1997-2002 CHEVY G-VAN

C&K 1500,2500,3500

305, 350 W/AC

W-WO Dual Battery

(Serpentine)

INSTALLATION NOTES

1. Disconnect negative battery terminal. Remove the air cleaner assembly and the top half of the fan shroud. Remove the fan and the serpentine belt. Fan nut has right hand threads.
2. Remove the alternator, tensioner, idler and hose standoff from the OEM alternator bracket. Remove the bracket and stud bolt from the engine, and the steel bushings from the OEM alternator bracket.
3. Install the OEM steel bushings into the new bracket (1) the same way they were in the OEM bracket. Install bracket (1) onto the engine with bolt (2) and lockwasher (5) at location "A", bolt (3) and lockwasher (5) at location "B", and bolt (4) with lockwasher (5) at location "C". Tighten bolts securely. Install the OEM idler and the alternator onto the new bracket with OEM bolts. Install the tensioner (12) onto the bracket with bolt (14) and flat washer (9).
4. Install idler (7) onto the main bracket into the lowest tapped hole with bolt (8) flat washer (9) and bushing (6). Install the new alternator onto the bracket with bolts (10) and slide bushings (11). Install the new belt(13) onto the engine and route it according to the diagram. If the belt is too short, move idler (7) up one hole until the belt can be installed.
5. Install the fan, the fan shroud and the air cleaner assembly. Connect the battery cable. Run the engine to make sure the belt tracks properly and is seated in all the pulleys correctly.
NOTE: Check compartment vacuum hoses and electrical wiring that may have been disturbed or re-routed during kit installation to be sure that hoses are not kinked, do not touch any high temperature item, and do not interfere with any linkage components.

CMK37-92V-I6ALT


1996-2000 Chevy Truck

1997-2002 Chevy G-Van

305, 350 W/AC

W-WO Dual Battery

(Serpentine)

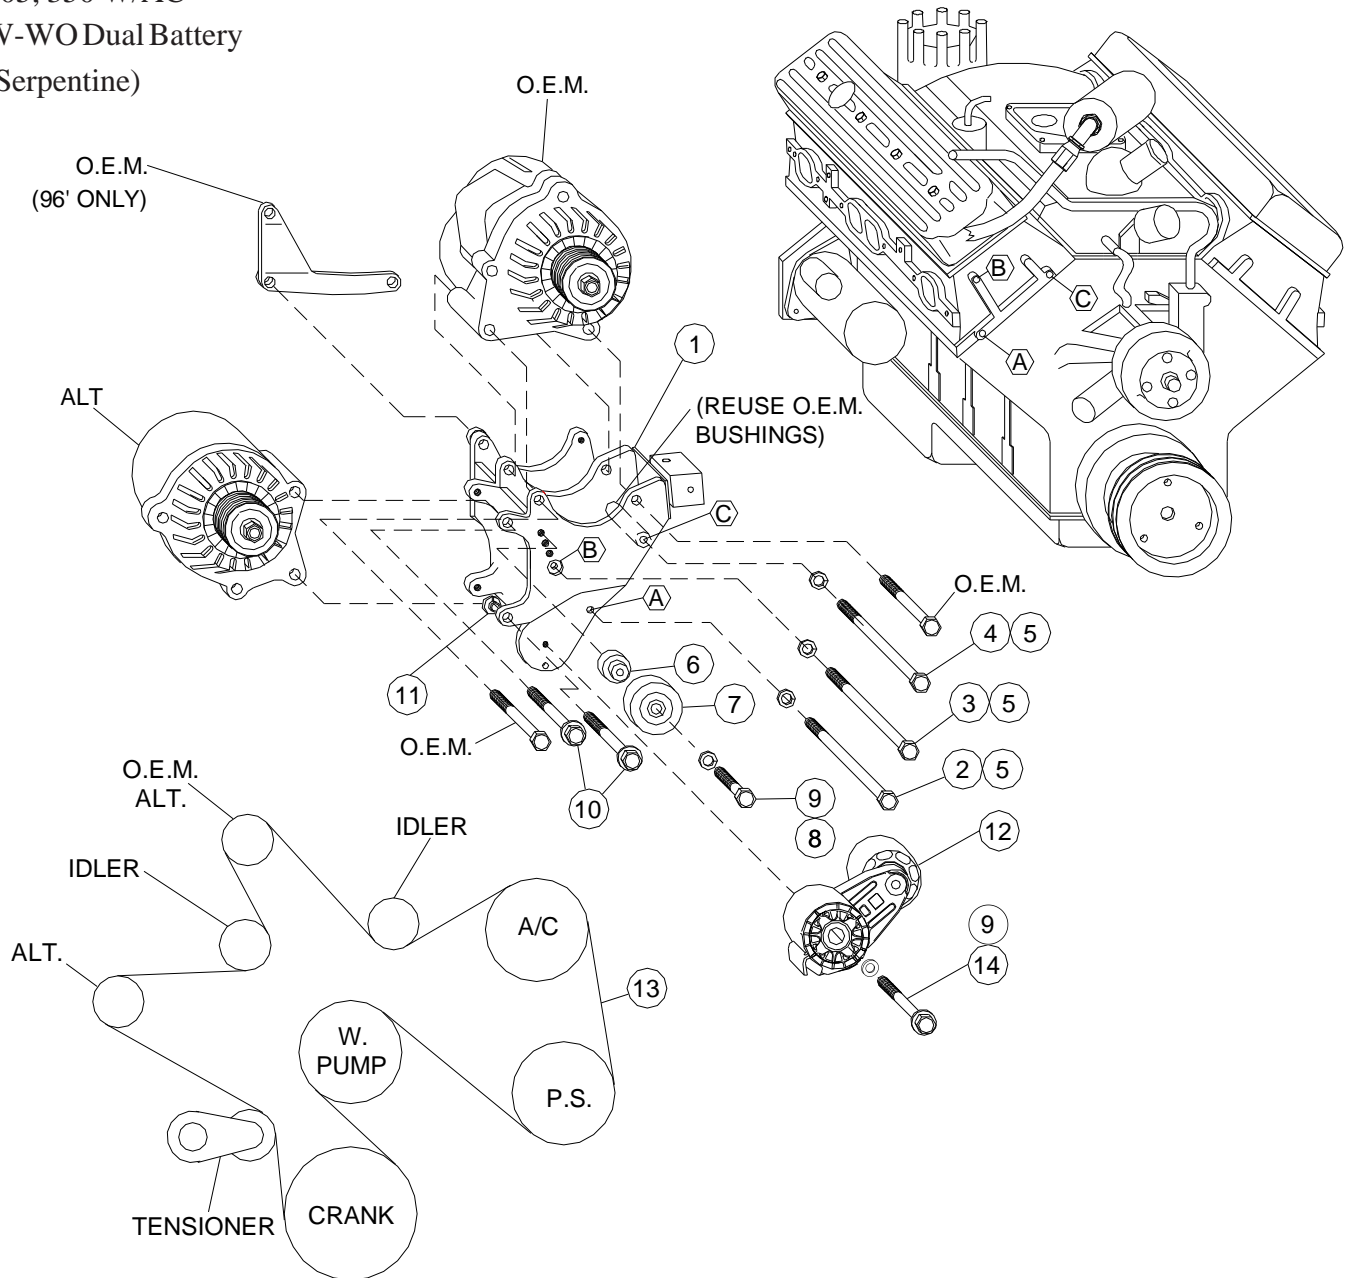

PARTS LIST

- | | |
|---------------------------------|---|
| 1. CMB 3792VI6 | 7. IPCS 2.5 Idler (1) |
| 2. 3/8-16 x 5-1/2 GR8 Bolt (1) | 8. 10mm x 35mm Bolt (1) |
| 3. 3/8-16 x 5-3/4 GR 8 Bolt (1) | 9. 3/8 FW (2) |
| 4. 3/8-16 X 6 GR 8 Bolt (1) | 10. 10mm x 80mm x 1.50 Mod. Flg. Bolt (2) |
| 5. 3/8 LW (3) | 11. 1255-0090 Mod. Slide Bushing (2) |
| 6. CMB 3867 (1) | 12. 89200B Tensioner (1) |
| | 13. 5061080 (1) |
| | 14. 10mm x 80mm Bolt (1) |